


New Heading Lock Mode

- Added compass mode heading lock
 - The boat will drift with the wind and current, but will maintain a constant compass heading
 - Speed can be manually adjusted with the handheld remote
- Heading lock—course mode is the default heading lock mode. To switch to heading lock—compass mode, press and hold the manual mode button, then press the 2, 1, 2 buttons in sequence.
- To switch back to heading lock—course mode, press and hold the manual mode button, then press the 2, 1, 1 buttons in sequence.
- The Pinpoint GPS system will remember which heading lock mode was last used, and the next time the heading lock button is pressed, the trolling motor will operate that mode
- This will also affect anchor mode
 - Anchor mode will be less accurate so customer may need to switch between modes depending on the type of fishing they are doing that day
- Starting serial number: 9D323635.

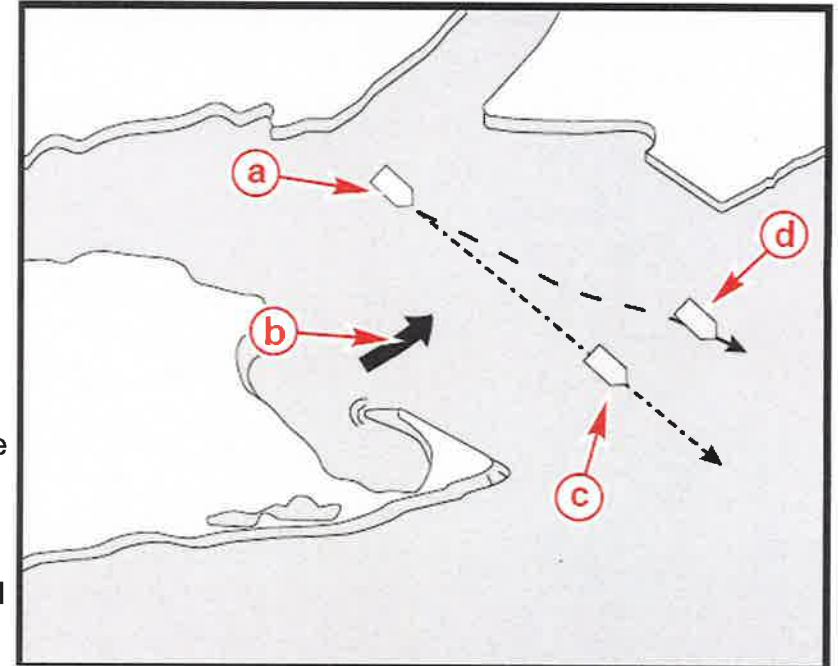

- a - Current position of the boat
- b - Direction of wind or current
- c - Boat traveling in heading lock default mode (adjusting for the wind and current)
- d - Boat traveling in heading lock new mode (trolling motor maintains a constant heading, boat drifting with the wind and current)