

THE BARREL

The inside of the barrel must be clean and free of obstructions.

I. TO CHECK THE INSIDE OF THE BARREL:

1. Point the firearm in a safe direction.
2. Put the safety switch in the 'S' position.
3. Raise the bolt handle.
4. Pull the bolt all the way back.
5. Remove any ammunition from the chamber or magazine. See Page 8.
6. Remove the bolt. See Page 5.
7. Look through the inside of the barrel from the chamber end to the muzzle. See Picture 1.

II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use the correct size cleaning rod.
2. Push the cleaning rod from the chamber end all the way through the barrel, until the rod comes out of the muzzle.
3. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the factory or a REMINGTON RECOMMENDED GUNSMITH.

WARNING: NEVER try to remove an object from the barrel by loading another cartridge and firing. This may cause the barrel to burst or a cartridge case to rupture and cause serious personal injury.

III. TO CLEAN THE BARREL FOLLOW INSTRUCTIONS SHOWN ON PAGE 10.


Before loading the firearm, make sure the inside of the barrel is free of dirt or other obstructions.

SPECIAL NOTICE

MODEL 700 .220 SWIFT LOADING INSTRUCTIONS

Unlike other cartridges which are chambered in the Model 700, the .220 SWIFT is a **semi-rimmed** cartridge. Therefore, to ensure proper feeding, make sure that the rim of the top cartridge is ahead of the rim of the cartridge below.

RIGHT

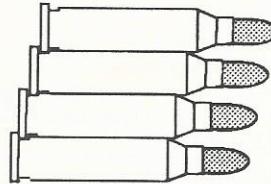

WRONG

